


Firmware Updating

Please update your Firmware in accordance with the following steps ;


1. Install the NCT-2000-XP program in the PC.
2. Make sure PC and UTMA are connected into Router or Switching HUB.
3. Turn on the UTMA power.
4. Click the “Setup” button



5. Click the "Update"

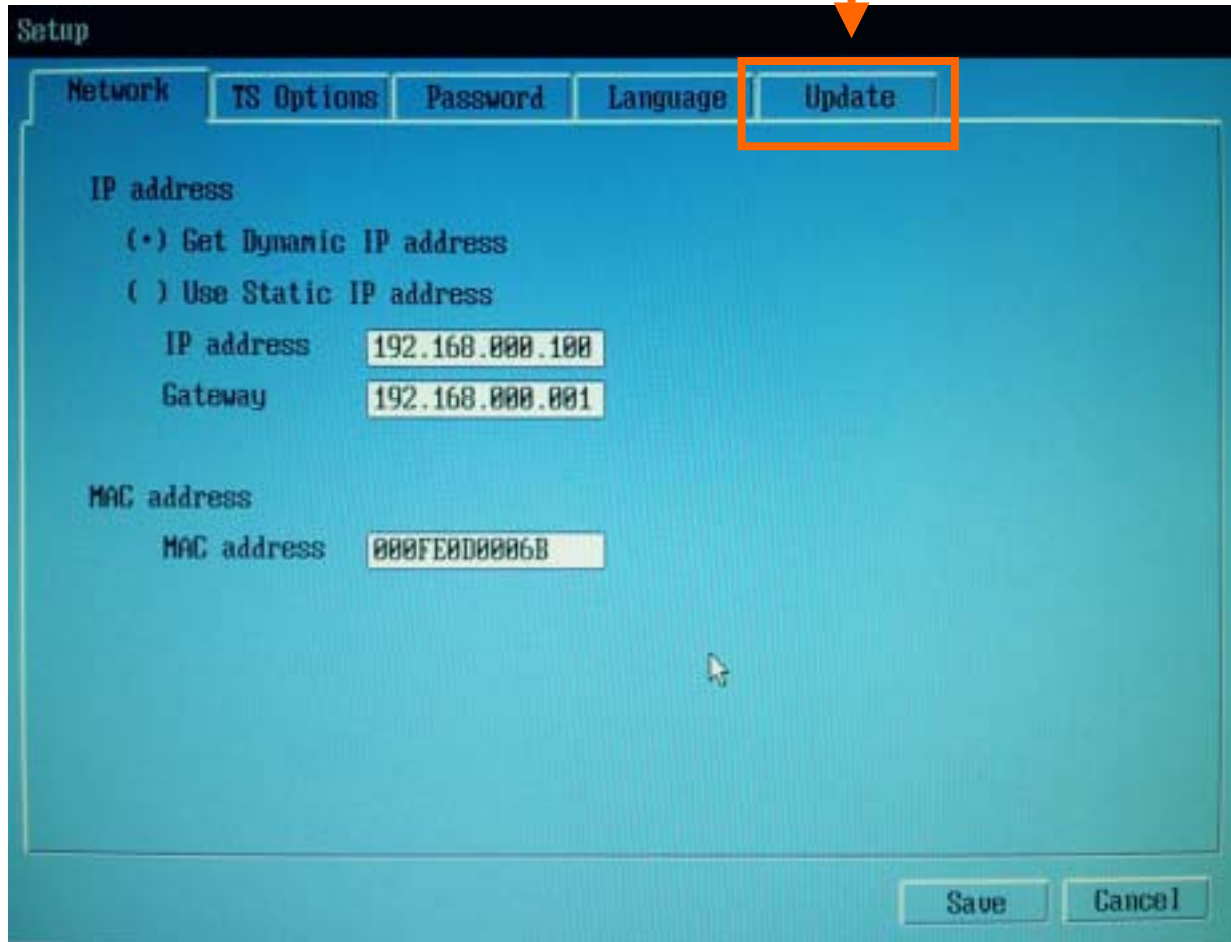

6. Click the "Update" button

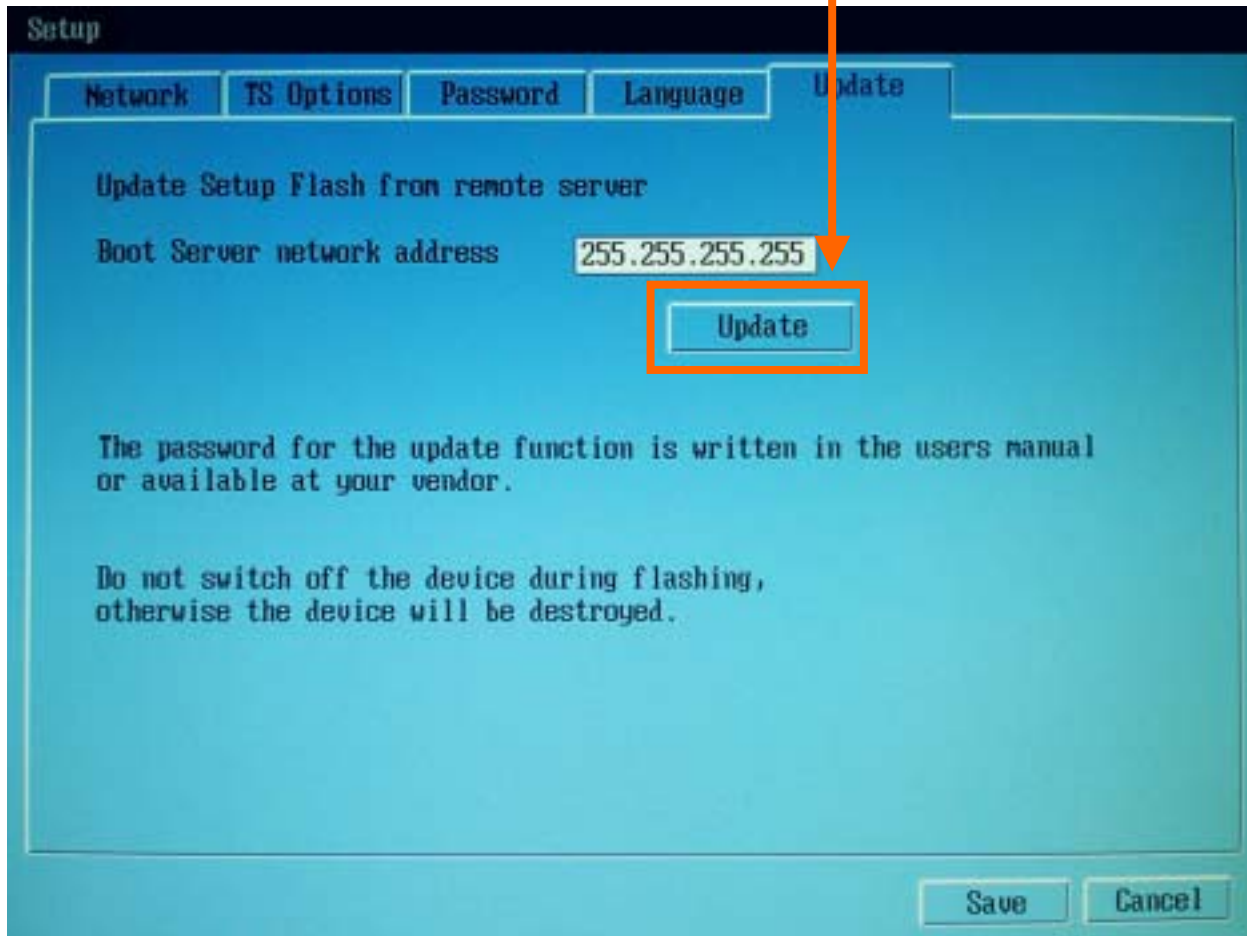

Firmware Updating

7. Input the password.
Password is "updateme"
For azerty keyboard = Updqte,e

8. Click the "OK" button




9. Searching the latest firmware from PC




9-1. When the below Screen Message is appeared, try to check the followings ;

1. Check whether the IP setting for UTMA and PC is correct.
→ or not, Insert the proper IP.
2. Check whether the PC and UTMA are connected into Router or Switching HUB.
→ or not, connect LAN cable.
3. Check whether NCT-2000-XP program is installed on the PC.
→ or not, install NCT-2000-XP program on the PC.

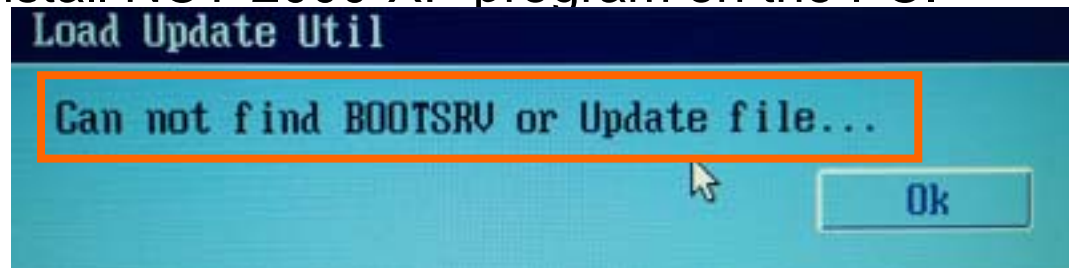

Firmware Updating

10. Click the "Yes" button

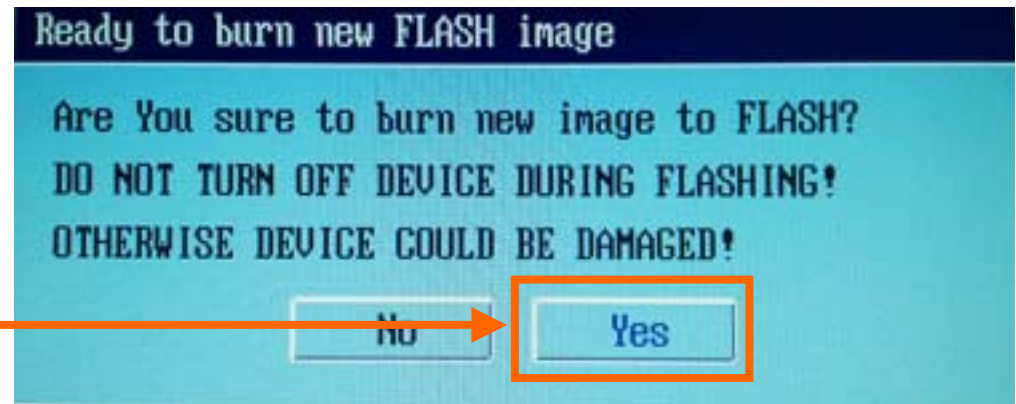


If not update the firmware, Power-Off the UTMA


11. Write twice the 2040 blocks.

CAUTION:

Do not switch OFF the UTMA during the firmware updating; otherwise the device could be damaged.

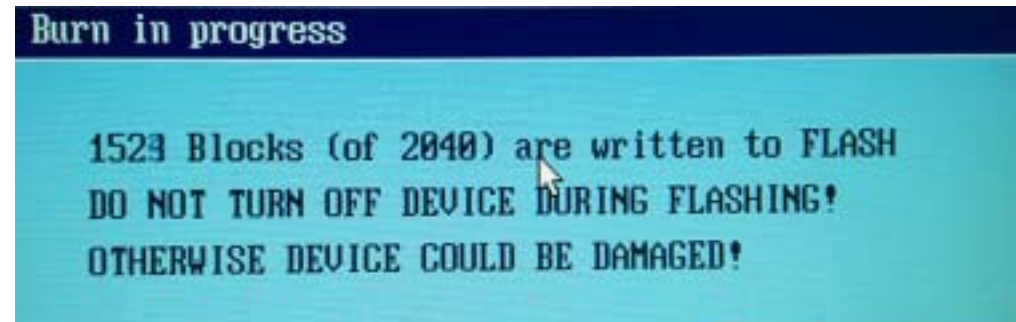

12. After finishing the firmware updating, you can see this message. And then turn off the UTMA power.

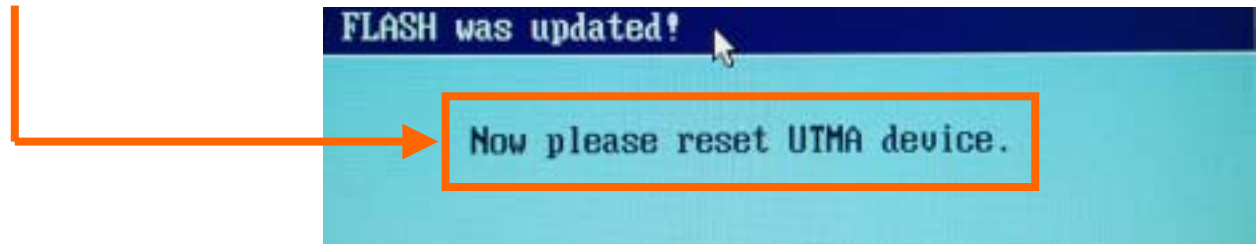

13. You can check the Firmware updating status through "Info" → Version & Device Model.

